

# Monitor 4 & 4EC

a B y x



The M4 and M4EC are compact, ergonomic, general purpose survey meters capable of detecting alpha, beta, gamma, and x-rays over 3 selectable ranges. A red count light flashes and a beep sounds with each event detected. The Monitor 4EC offers a more linear reading for gamma and x-rays (above 40 keV).

## Detector

*Monitor 4:* Halogen-quenched uncompensated GM tube with thin mica window 1.5-2.0 mg/cm<sup>2</sup> thick.

*Monitor 4EC:* Halogen-quenched GM tube, energy compensated sidewall 2mm tin filter. Thin mica window 1.5-2.0 mg/cm<sup>2</sup> thick.

## Energy Sensitivity

1000 CPM/mR/hr (Cs<sup>137</sup>). 4EC is the same as M4 except the energy response for gamma and x-rays through the detector sidewall is flat within +61% or -26% over the range of 40 keV to 100 keV, and within +35% or -17% over the range of 100 keV to 1.3 MeV.

## Operating Range

0-.5, 0-5, 0-50 mR/hr

0-500, 0-5,000, 0-50,000 CPM or

0-5, 0-50, 0-500 μSv/hr (SI Scale Meter Option)

## Accuracy

Typically ±15% of reading (Cs<sup>137</sup>)

## Display

Analog Meter holds full scale in fields as high as 100X maximum reading. CPM & mR/hr scale. Optional SI Scale Meter Available



M4 with CPM & mR/hr meter scale

# SE INTERNATIONAL INC



P.O. Box 39, 436 Farm Rd. Summertown, TN 38483

1-800-293-5759

Fax: 931-964-3564

www.seintl.com

radiationinfo@seintl.com



**RADIATION**<sup>®</sup>  
A • L • E • R • T

# Monitor 4 & 4EC

## Audio Indicator

Internally mounted beeper

## Power Requirements

9-volt alkaline (included)

Approx. 2,000 hrs at background

## Temperature Range

-20° to 55°C (-4° to 131°F).

## Weight

M4: 200 g (7.1 oz)

M4EC: 224 g (7.9 oz)

## Outputs

Headphone 3.5mm jack to count to computer or datalogger.



The end window of the M4 and M4EC

## Size

209 x 71 x 50 mm (8.2 x 2.8 x 1.9 in.)

## Includes


Carrying Case w/ Belt Clip, Battery

## Options

SI Meter Option, Observer Software, NIST Calibration


## Limited Warranty

1 year limited warranty

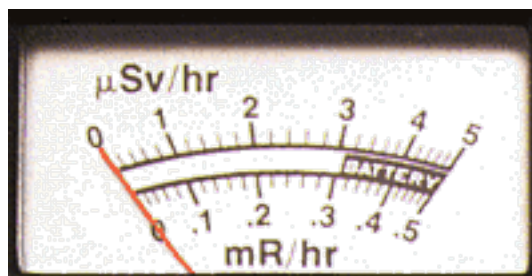


Optional SI Meter Scale: 0-500 µSv/hr & 0-50 mR/hr

ENERGY RESPONSE  
(Relative to Cs-137)

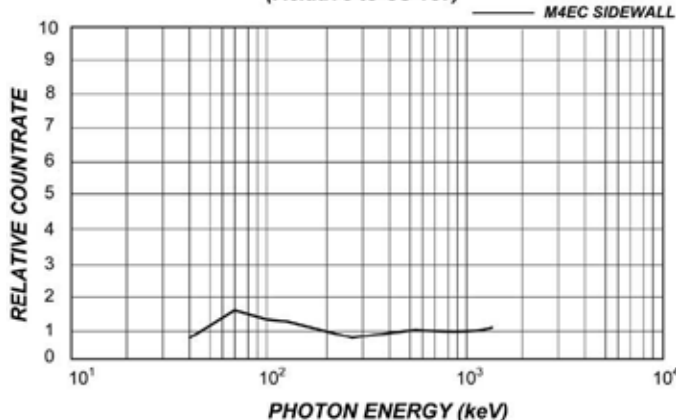

ENERGY RESPONSE  
(Relative to Cs-137)

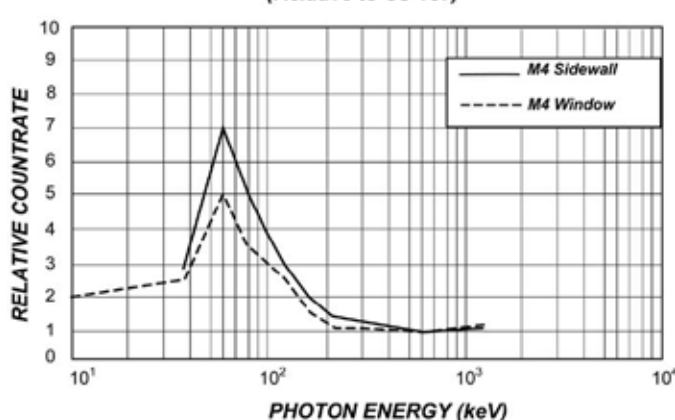

# SE INTERNATIONAL INC



P.O. Box 39, 436 Farm Rd. Summertown, TN 38483

1-800-293-5759

Fax: 931-964-3564

www.seintl.com

radiationinfo@seintl.com



**RADIATION**  
A • L • E • R • T